

# SAMSUNG





BN68-14482A-01

## About the Samsung SolarCell Remote (Samsung Smart Remote)







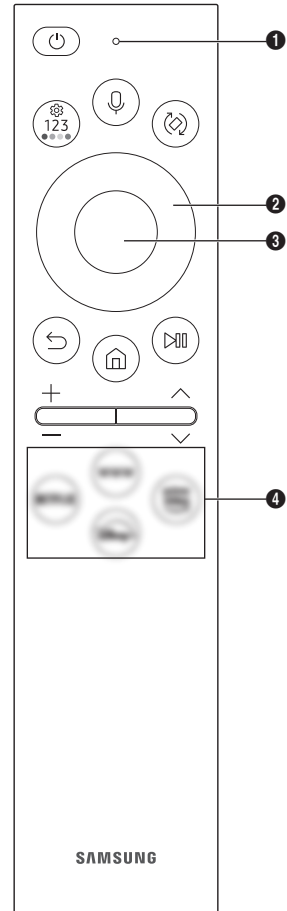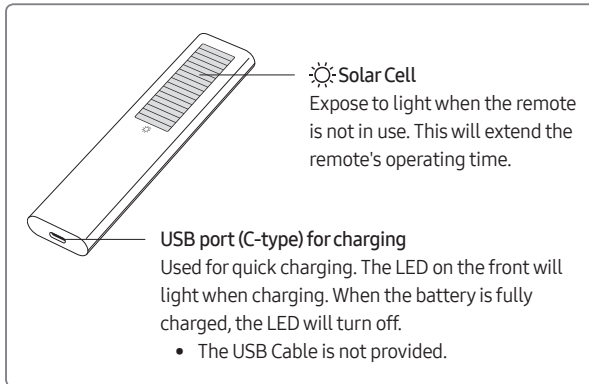






THE PLASTIC PART OF 22 SMART CONTROL CONTAINS A MINIMUM OF 24% POST-CONSUMER RECYCLED PLASTIC.  
UL.COM / ECV

**Consumes 88% less energy than 2020 model**



Fire or explosion may occur, resulting in damage to the remote control or personal injury.

- Do not apply shock to the remote control.
- Be careful not to let foreign substances such as metal, liquid, or dust come in contact with the charging terminal of the remote control.
- When the remote control is damaged or you smell smoke or burning fumes, immediately stop operation and then repair it at the Samsung service centre.
- Do not arbitrarily disassemble the remote control.
- Be careful not to let infants or pets suck or bite the remote control. Fire or explosion may occur, resulting in damage to the remote control or personal injury.

Button	Description
 (Power)	Press to turn the TV on or off. <ul style="list-style-type: none"> <li>Select whether to switch the TV to Landscape Mode or Portrait Mode before turning off or to turn off the TV without changing the orientation. To change to the desired setting, navigate to <b>Power Off Mode</b> (🏠) &gt; <b>Menu</b> &gt; <b>Settings</b> &gt; <b>All Settings</b> &gt; <b>General &amp; Privacy</b> &gt; <b>Power and Energy Saving</b> &gt; <b>Power Off Mode</b>) and change the setting.</li> </ul>
<b>1</b> MIC / LED	Used as MIC when using voice recognition with the remote control. <ul style="list-style-type: none"> <li>Do not impact the MIC hole or use a sharp object to poke into the hole.</li> </ul>
 (Voice Assistant)	Runs Voice Assistant. Press and hold the button, say a command, and then release the button to run Voice Assistant. <ul style="list-style-type: none"> <li>The supported Voice Assistant's languages and features may differ by geographical area.</li> </ul>
 (Settings / Number / Colour button)	Each time you press this button, Settings menu / virtual numeric pad / Option pad with Colour buttons are displayed alternately. <ul style="list-style-type: none"> <li>Use this button to access additional options that are specific to the feature in use.</li> <li>Press to bring up the virtual numeric pad on the screen. Use the numeric keypad to enter numeric values. Select numbers and then select <b>Done</b> or <b>Enter Number</b> to enter a numeric value. Use to change the channel, enter a PIN, ZIP code and etc.</li> </ul>
 (Rotate)	Press the button to rotate the screen to <b>Landscape Mode</b> or <b>Portrait Mode</b> .
<b>2</b> Directional button (up, down, left, right)	Moves the focus and changes the values seen on the TV's menu.
<b>3</b> Select	Selects or runs a focused item. When pressed while you are watching a broadcast programme, detailed programme information appears.
 (Return)	Press to return to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a programme, the previous channel appears.
 (Smart Hub)	Press to switch to the <b>Media Home</b> . From the <b>Ambient Mode</b> screen, press to switch to the <b>Ambient Mode Home</b> .
 (Play/pause)	When pressed, the playback controls appear. Using these controls, you can control the media content that is playing. To use <b>Game Bar</b> , press and hold the button in <b>Game Mode</b> . <ul style="list-style-type: none"> <li><b>Game Bar</b> may not be supported depending on the model or geographical area.</li> </ul>
+ / - (Volume)	Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 2 seconds or more, the <b>Accessibility Shortcuts</b> appears.
^ / v (Channel)	Move the button up or down to change the channel. To see the <b>Guide</b> or <b>Channel List</b> screen, press the button. (The <b>Guide</b> or <b>Channel List</b> screen appears depending on the geographical area.) <ul style="list-style-type: none"> <li>When pressed for 1 second or more, the <b>Channel List</b> screen appears.</li> </ul>
<b>4</b> Launch app button	Press each button to run its function. (These buttons may vary depending on the geographical area.) <ul style="list-style-type: none"> <li>Available apps may differ depending on the geographical area or contents provider.</li> </ul>
 +  (Pairing)	If the Samsung Smart Remote does not pair to the TV automatically, point it at the front of the TV, and then press and hold the  and  buttons simultaneously for 3 seconds or more.

- Use the Samsung Smart Remote less than 6 m from the TV. The usable distance may vary with the wireless environmental conditions.
- The images, buttons, and functions of the Samsung Smart Remote may differ with the model or geographical area.
- The Universal Remote function operates normally only when you use the Samsung Smart Remote that comes with the TV.
- It is recommended to use an original Samsung charger. Otherwise, it may cause performance degradation or failure of the product. In this case, the warranty service is not applicable.
- When the remote control does not work due to low battery, charge it by using the USB-C type port.
- When some apps are launched in **Portrait Mode**, their mode can be switched to Landscape depending on the app's policy.